

artos[®]

FS309

INSTALLATION GUIDE

widespread Trova faucet

BRUSHED NICKEL(BN)



CHROME(CH)



BLACK(BK)



artos[®]

FS309

widespread Trova faucet

OPERATING SPECIFICATIONS



OPERATING FLOW RATE/PRESSURE

1.8 gpm max (6.8L/min) at 60 psi

OPERATING TEMPERATURE

Maximum: 176°

CARTRIDGE

ceramic disk cartridge

STANDARDS

Certified to CUPC

Certified to AB1953

Certified to NSF/ANSI 61

ADA for lever handle

REQUIREMENTS


Max Surface Thickness: 1-5/8"

APPROVALS

- Certified to CUPC
- Certified to AB1953
- Certified to NSF/ANSI 61
- ADA 9 for lever handle




artos[®]

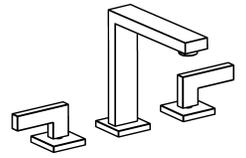

FS309

PRODUCT DIMENSIONS

widespread Trova faucet

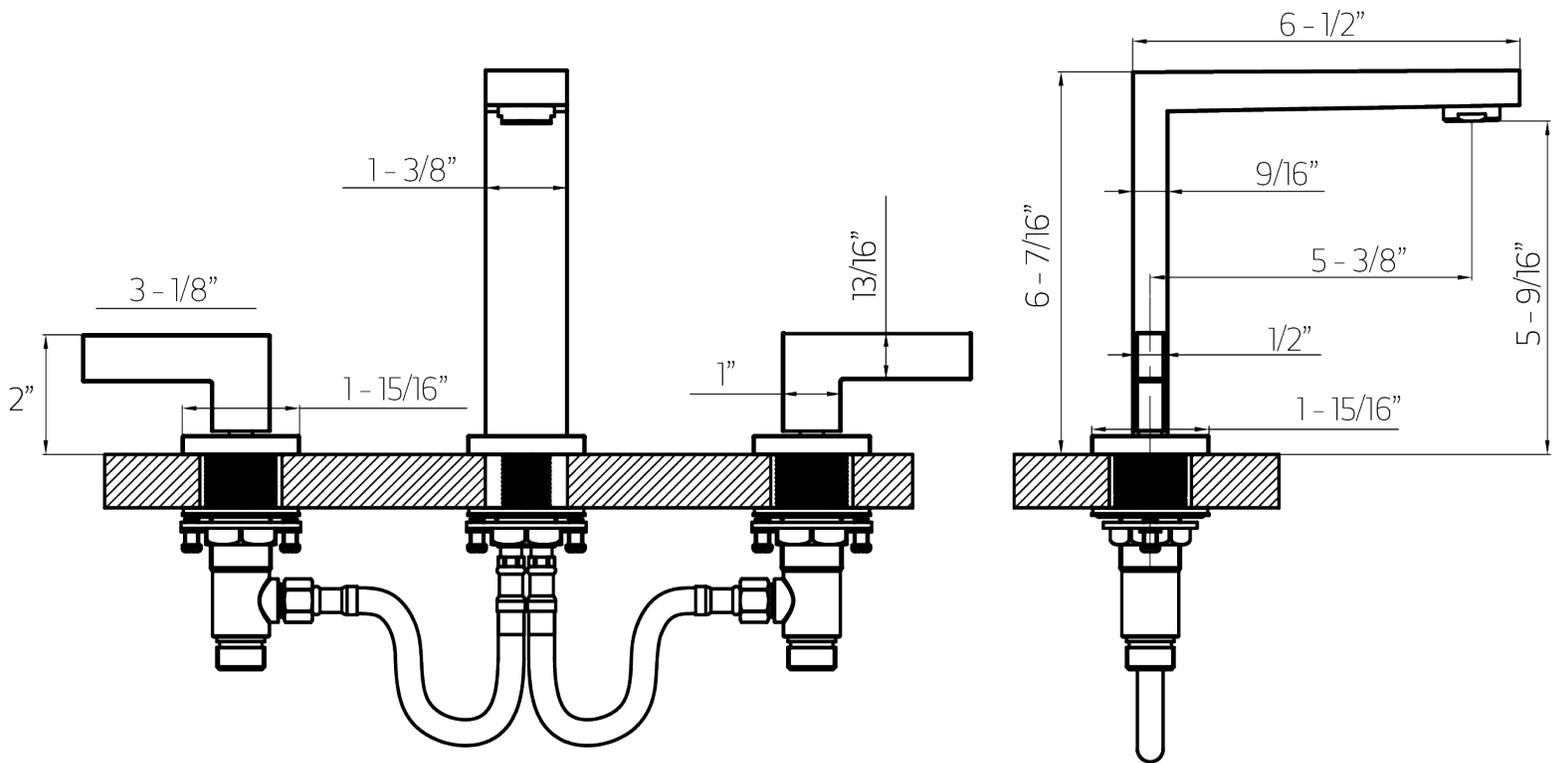


artos[®]

FS309


widespread Trova faucet

INSTALLATION STEPS


TOOLS FOR INSTALLATION

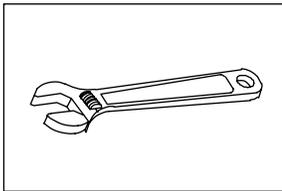

Adjustable wrench

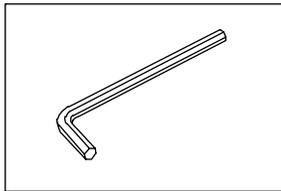

Hexagon wrench

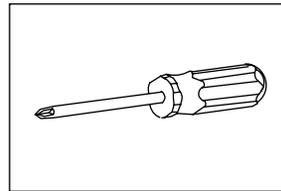


Philips screwdriver

INSTALLATION STEPS


1. Please check that all components are present.
2. Before installation, ensure that all feed lines are clear of debris and on/off valve is present.
3. Ensure water pressure is between 20-125 PSI (includes combination of hot and cold feed lines).
4. Pictures in the manual are general in content and may not represent exactly your purchased faucet. If you are having difficulties please contact a professional plumber.
5. If you will be away from home for an extended period you should shut off the main water supply.

STEP 1

1. Remove the T-valve, lock nut and washer from the spout body. Place spout in center hole of sink. Assemble washer and tighten the lock nut to it. Connect the T-valve to the spout body using the wrench.

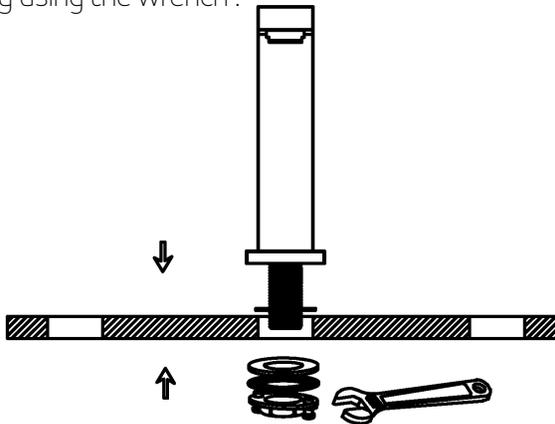


STEP 2

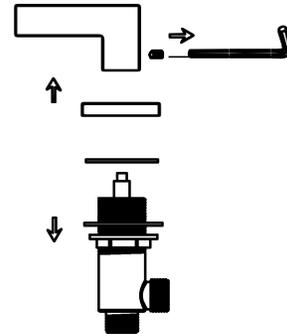


2. Remove mounting hardware from handle body. Connect water supply tube to valve body and tighten with lock nut. Do not allow the water supply brass tube to twist. Use two wrenches, as shown in the diagram, tighten the flexible hose.

STEP 3

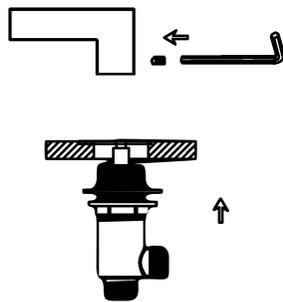

3. Place the spout in center hole of sink and handle body through right hole. (Left is red, right is blue). Assemble the rubber washer, washer and tighten with lock nut.

STEP 4

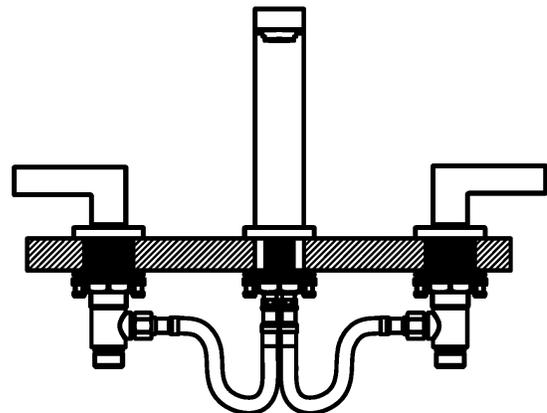

4. Connect handle body and faucet body with braided hoses. Tighten wrench tight.


artos[®]

FS309

widespread Trova faucet

INSTALLATION STEPS


STEP 5

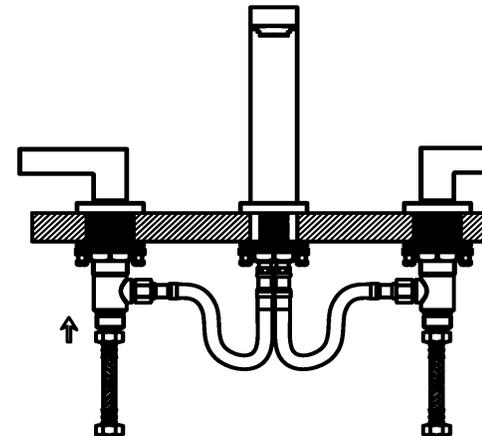

5. Screw and tighten the flexible hose to the faucet. Left is red, right is blue. Do not allow the water supply brass tube to twist.

STEP 6

6. Attach flexible hose to water supply.

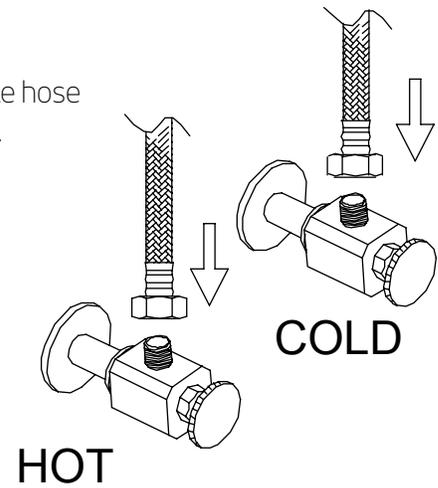


artos®

FS309

widespread Trova faucet

PARTS BREAKDOWN

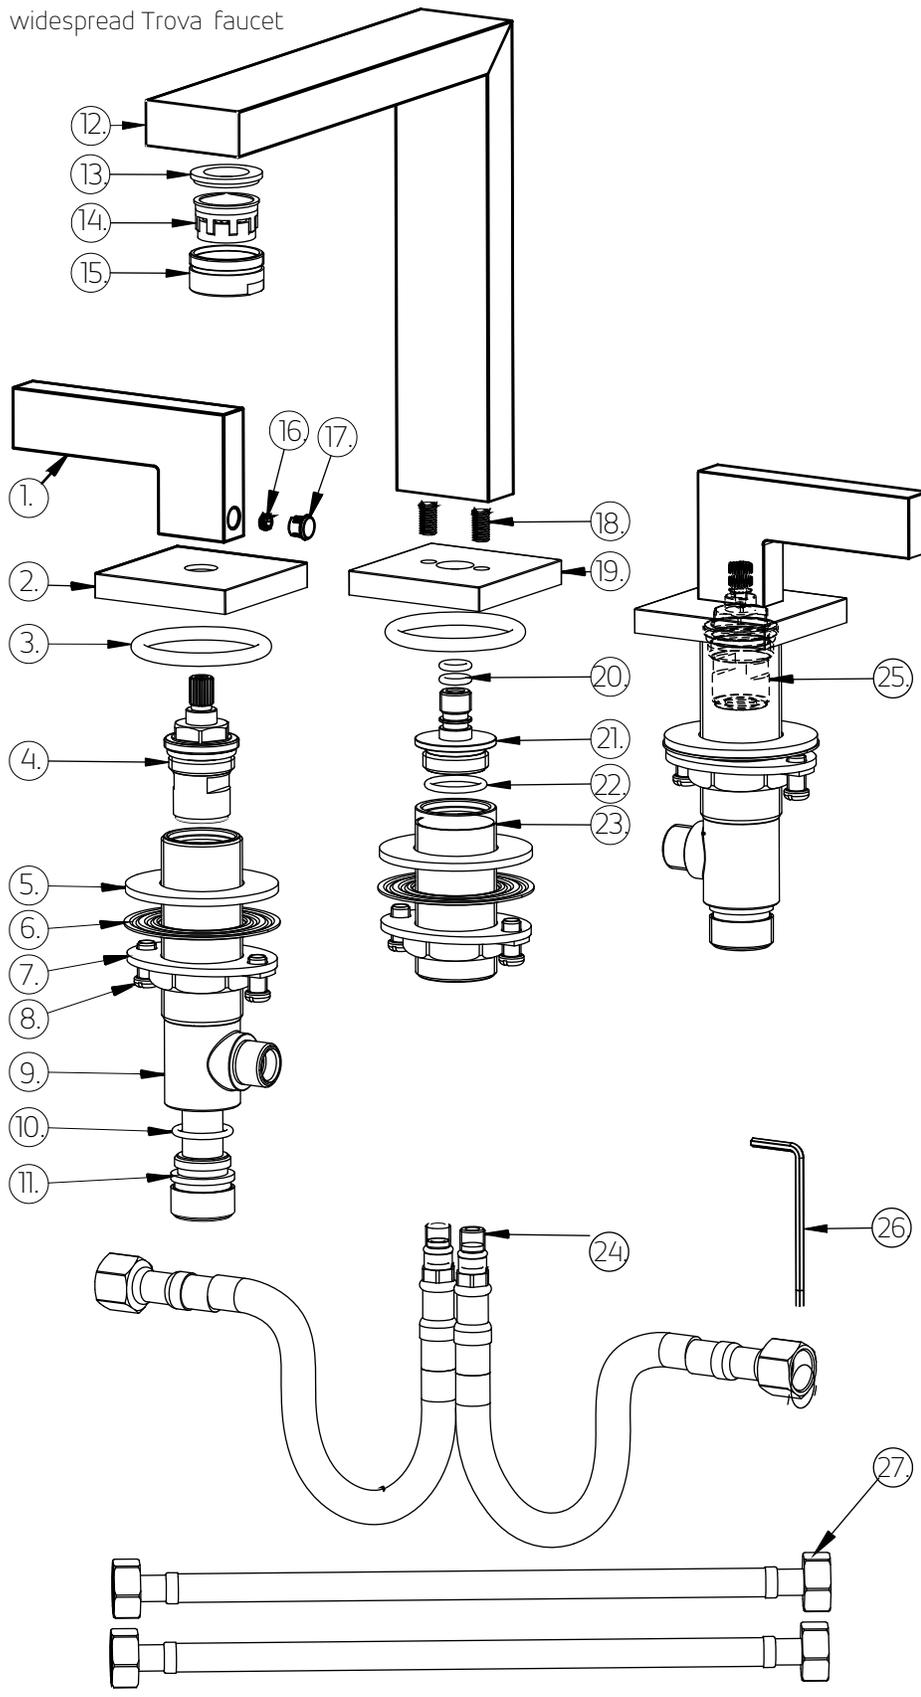

- 1. handle
- 2. cap
- 3. o-ring
- 4. cartridge
- 5. washer
- 6. sus washer
- 7. lock nut
- 8. screw
- 9. cartridge seat
- 10. o-ring
- 11. connector
- 12. body
- 13. o-ring
- 14. aerateor
- 15. cap
- 16. hex screw
- 17. silicon nut
- 18. hex screw
- 19. cap
- 20. o-ring
- 21. connector
- 22. o-ring
- 23. connector
- 24. hose
- 25. cartridge
- 26. allen key
- 27. hose

artos[®]

FS309

widespread Trova faucet

CARE & MAINTENANCE

For best results, keep the following in mind to retain the high quality finish of your artos[®] faucets:

- Use a soft, dampened sponge or cloth. On no account should you use an abrasive material such as a brush, scouring pad or steel wool to clean surfaces.
- Test your cleaning agent solution on an inconspicuous area before applying to the entire faucet.
- Wipe surfaces clean and rinse completely with water immediately after applying cleaning agent.
- An ideal cleaning technique is to rinse faucet thoroughly and blot dry any water from the surface after each use.

LIMITED LIFETIME WARRANTY

artos faucets are guaranteed for life against leaks and finishing defects for as long as the original purchaser owns it.

Damage caused by accident, misuse, abuse, improper installation, improper cleaning or alteration will void the warranty. This warranty does not cover replacement parts where damage is caused by normal wear and tear. Westover, Inc is not responsible for labor charges, installation or other incidental or consequential costs. Proof of purchase must be provided with all claims.

Please register this product online at WWW.ARTOS.US.COM

ITEM NO. **FS309**

SERIAL NO.